


Bourne Marimbas

Bass Assembly Instructions



1. Lay out all parts on the floor

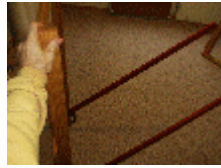

2. Position one leg assembly upright.



3. Insert the leg assembly into frame.
Be gentle, don't force. The two will engage when they are positioned at 90 degrees to each other.



4. Remove wingnuts from frame center post.



5. Attach leg braces to frame.



6. Repeat steps 2 & 3 with other leg.



7. Secure braces, reattach wingnuts.



8. Lift in one of the tube arrays.



9. Drop it into slots in frame.



10. Rest tube array on center bar.



11. Repeat steps 8-10 with other tubes.



12. Tube arrays overlap on center post.



13. Insert bars between cords. Start with low C bar and pull the top cord fairly tight as bars are added.



14. For lotsa buzz... positions bands OFF of the buzzing filament.



15. For no buzz... positions bands ON the buzzing filament.



16. For medium buzz... positions bands partially on the buzzing filament. Experiment to find the sound you like.